


Pro Lite

LCD Monitor

ENGLISH

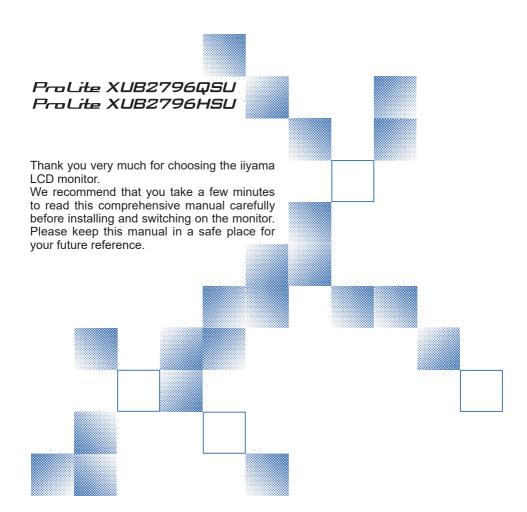

iiyama | Servicecard





Dear user, we congratulate you on the purchase of your iiyama LCD.

For details on warranty and locally used pixel policies that apply directly after installation of your product please check the iiyama website.

To report a fault, please contact your local support centre found at https://iiyama.com

Things to check before you call the ijyama information line

I if the power cable is connected securely and turned on?

I if the display has been turned on?

I if the signal cable is connected securely and the correct input selected?

I if the computer has been restarted with the display connected?

I if the graphics card is correctly installed with the latest drivers possible?

I if the correct native resolution has been selected via 'Display Properties'?

If the R/G/B signal configuration is correct?

I if the displays On Screen Menu is shown?

I if the correct brightness and contrast settings have been set?

I if given display tolerances and compatibility have been considered?

I if via the On Screen Menu you have performed a Factory Reset/Recall?

Before reporting the screen defect, please prepare the following information/evidence:

| model number *

| purchase receipt and serial number *

I name and address for collection

I telephone/fax number, for availability during the day

convenient collection date (date, time)

I short description of the defect

Important Note:

If there is no fault found in the collected equipment after inspection, the transferring party shall incur charges for transport and administration.

If you have checked all of the above and there is still no picture, call our information line for assistance in your country.



^{*} see the identification plate on the back of the case.

CE MARKING DECLARATION OF CONFORMITY

This LCD monitor complies with the requirements of the EC/EU Directive 2014/30/EU "EMC Directive", 2014/35/EU "Low Voltage Directive", 2009/125/EC "ErP Directive" and 2011/65/EU "RoHS Directive"

The electro-magnetic susceptibility has been chosen at a level that gives correct operation in residential areas, business and light industrial premises and small-scale enterprises, inside as well as outside of the buildings. All places of operation are characterised by their connection to the public low voltage power supply system.

IIYAMA CORPORATION: Wijkermeerstraat 8, 2131 HA Hoofddorp, The Netherlands

Model No.: PL2796QS, PL2796HS



We recommend recycling of used product. Please contact your dealer or iiyama service center. Recycle information is obtained via the Internet, using the address: https://iiyama.com

You can access the Web page of different countries from there.

- We reserve the right to change specifications without notice.
- All trademarks used in this user manual are the property of their respective owners.
- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.
- Eprel registration number : ProLite XUB2796QSU-B5: 1355229, ProLite XUB2796HSU-B5: 1352883

TABLE OF CONTENTS

FOR YOUR SAFETY	1
SAFETY PRECAUTIONS	1
SPECIAL NOTES ON LCD MONITORS	3
CUSTOMER SERVICE	3
CLEANING	3
BEFORE YOU OPERATE THE MONITOR	4
FEATURES	4
CHECKING THE CONTENTS OF THE PACKAGE	4
USING ARM OR STAND	5
FITTING AND REMOVAL OF STAND	6
CONTROLS AND CONNECTORS	8
CONNECTING YOUR MONITOR: ProLite XUB2796QSU	9
CONNECTING YOUR MONITOR: ProLite XUB2796HSU	10
COMPUTER SETTING	11
ADJUSTING THE HEIGHT AND THE VIEWING ANGLE	11
OPERATING THE MONITOR	12
ADJUSTMENT MENU CONTENTS	13
STANDBY FEATURE	23
TROUBLE SHOOTING	24
RECYCLING INFORMATION	25
APPENDIX	26
SPECIFICATIONS: ProLite XUB2796QSU-B5	26
SPECIFICATIONS: ProLite XUB2796HSU-B5	27
DIMENSIONS : ProLite XUB2796QSU	28
DIMENSIONS : ProLite XUB2796HSU	29
COMPLIANT TIMING	30

FOR YOUR SAFETY

SAFETY PRECAUTIONS

WARNING

STOP OPERATING THE MONITOR WHEN YOU SENSE TROUBLE

If you notice any abnormal phenomena such as smoke, strange sounds or fumes, unplug the monitor and contact your dealer or iiyama service center immediately. Further use may be dangerous and can cause fire or electric shock.

NEVER REMOVE THE CABINET

High voltage circuits are inside the monitor. Removing the cabinet may expose you to the danger of fire or electric shock.

DO NOT PUT ANY OBJECT INTO THE MONITOR

Do not put any solid objects or liquids such as water into the monitor. In case of an accident, unplug your monitor immediately and contact your dealer or ijyama service center. Using the monitor with any object inside may cause fire, electric shock or damage.

INSTALL THE MONITOR ON A FLAT, STABLE SURFACE

The monitor may cause an injury if it falls or is dropped.

DO NOT USE THE MONITOR NEAR WATER

Do not use where water may be splashed or spilt onto the monitor as it may cause fire or electric shock.

OPERATE UNDER THE SPECIFIED POWER SUPPLY

Be sure to operate the monitor only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.

PROTECT THE CABLES

Do not pull or bend the power cable and signal cable. Do not place the monitor or any other heavy objects on the cables. If damaged, the cables may cause fire or electric shock.

ADVERSE WEATHER CONDITIONS

It is advisable not to operate the monitor during a heavy thunder storm as the continual breaks in power may cause malfunction. It is also advised not to touch the plug in these circumstances as it may cause electric shock.

INSTALLATION LOCATION

Do not install the monitor where sudden temperature changes may occur, or in humid, dusty or smoky areas as it may cause fire, electric shock or damage. You should also avoid areas where the sun shines directly on the monitor.

DO NOT PLACE THE MONITOR IN A HAZARDOUS POSITION

The monitor may topple and cause injury if not suitably located. Please also ensure that you do not place any heavy objects on the monitor, and that all cables are routed such that children may not pull the cables and possibly cause injury.

MAINTAIN GOOD VENTILATION

Ventilation slots are provided to keep the monitor from overheating. Covering the slots may cause fire. To allow adequate air circulation, place the monitor at least 10cm (or 4 inches) from any walls. When removing the tilt stand, the ventilation slots on the back side of the monitor can be blocked. This may overheat the monitor and may cause fire or damage. Make sure to allow enough ventilation when removing the tilt stand. Operating the monitor on its back, side, upside down or on a carpet or any other soft material may also cause damage.

DISCONNECT THE CABLES WHEN YOU MOVE THE MONITOR

When you move the monitor, turn off the power switch, unplug the monitor and be sure the signal cable is disconnected. If you do not disconnect them, it may cause fire or electric shock.

UNPLUG THE MONITOR

If the monitor is not in use for a long period of time it is recommended that it is left unplugged to avoid accidents.

HOLD THE PLUG WHEN DISCONNECTING

To disconnect the power cable or signal cable, always pull it by the plug. Never pull on the cable itself as this may cause fire or electric shock.

DO NOT TOUCH THE PLUG WITH WET HANDS

Pulling or inserting the plug with wet hands may cause electric shock.

WHEN YOU INSTALL THE MONITOR ON YOUR COMPUTER

Be sure the computer is strong enough to hold the weight of the monitor, otherwise, you may damage your computer.

CAREFUL! PROTECT YOUR HANDS AND FINGERS

- Be careful not to hurt your fingers or hands when you change the height or the angle.
- Injury can occur if care is not taken to avoid finger contact with the displays base when adjusting the height. (Just for height adjustable model.)

REMARK FOR 24/7 USAGE

This product is not specifically designed for 24/7 usage in all environments.

REMARK FOR WALL MOUNTING

This product is not designed for digital signage (electronic signboard) applications such as wall mounting.

OTHERS

ERGONOMIC RECOMMENDATIONS

To eliminate eye fatigue, do not operate the monitor against a bright background or in a dark room. For optimal viewing comfort, the monitor should be just below eye level and 40-60 cm (16-24 inches) away from your eyes. When using the monitor over a prolonged time, a ten minute break every hour is recommended as looking at the screen continuously can cause eye strain.

SPECIAL NOTES ON LCD MONITORS

The following symptoms are normal with LCD monitors and do not indicate a problem.

NOTE

- When you first turn on the LCD monitor, the picture may not fit in the display area because of the type of computer that is used. In this case, adjust the picture position to the correct position.
- You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
- Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen can be recovered slowly by changing the image or turning off the Power Switch for some hours.

CUSTOMER SERVICE



If you have to return your unit for service and the original packaging has been discarded, please contact your dealer or iiyama service center for advice or replacement packaging.

CLEANING

WARNING

If you drop any materials or liquids such as water into the monitor when cleaning, unplug the power cable immediately and contact your dealer or iiyama service center.

CAUTION

For safety reasons, turn off the power switch and unplug the monitor before you clean it.

NOTE

- To protect the LCD panel, do not scratch or rub the screen with a hard object.
- Never use any of the following strong solvents. These will damage the cabinet and the LCD screen.

Thinner Spray-type cleaner

Benzine Wax

Touching the cabinet with any product made from rubber or plastic for a long time may cause degeneration or loss of paint on the cabinet.

CABINET

Stains can be removed with a cloth lightly moistened with a mild detergent solvent. Then wipe the cabinet with a soft dry cloth.

LCD

Periodic cleaning with a soft dry cloth is recommended.

SCREEN

Don't use tissue paper etc. because these will damage the LCD screen.

BEFORE YOU OPERATE THE MONITOR

FEATURES

- ◆ Supports Resolutions up to 2560 × 1440 : ProLite XUB2796QSU
- ◆ Supports Resolutions up to 1920 × 1080 : ProLite XUB2796HSU
- High Contrast 1000:1 (Typical), Adv. Contrast Function Available / Brightness 250cd/m² (Typical)
- Supports AMD FreeSync™ technology
- Flicker Free
- Moving Picture Response Time 1ms
- Blue Light Reducer
- Digital Character Smoothing
- 2 × 2W Stereo Speakers
- Standby Feature
- VESA Mounting Standard (100mm×100mm) Compliant
- Keyhole for Security Lock

CHECKING THE CONTENTS OF THE PACKAGE

The following accessories are included in your package. Check to see if they are enclosed with the monitor. If anything is missing or damaged, please contact your local ijyama dealer or regional iiyama office.

- Power Cable*¹
- USB Cable
- VESA Plate
- Quick Start Guide
- DisplayPort Cable*2
- Stand-Neck
- Screwdriver

- HDMI Cable
- Stand-Base with a screw
- Safety Guide


CAUTION

- *1 The rating of the Power Cable enclosed in 120V area is 10A/125V. If you are using a power supply higher than this rating, then a power cable with a rating of 10A/ 250V must be used. However, all guarantees and warranties are void for any problems or damage caused by a power cable not supplied by iiyama. An approved power cable greater or equal to H05VVF, 3G, 0.75mm² must be used.
- *2 Accessory for ProLite XUB2796QSU.

USING ARM OR STAND

CAUTION


- Before installation, make sure the wall, ceiling or desktop arm is strong enough to hold the necessary weight of the monitor and the mount.
- Angle adjustment range :23 degrees upward and 5 degrees downward



< DISPLAY ARM OR DESK ARM STAND >


CAUTION

When you use with the display arm or desk arm stand, in consideration of thickness of the mounting stage, tighten the M4 Screws (4pcs) which "L" length is 7mm to fasten the monitor. Using the screw longer than this may cause electric shock or damage because it may contact with the electrical parts inside the monitor.

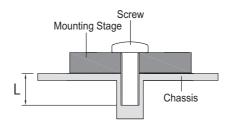

< ROTATING THE DISPLAY >

The monitor is designed to be compatible with both landscape and portrait modes. Video card for portrait display will be required for rotating the image on the screen.

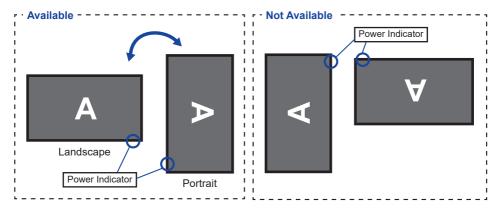

With Stand:



- Adjust the monitor's height before panel rotation.
- Attempting to rotate the panel forcibly without adjusting the stand height may cause damage to the panel or the stand.


FITTING AND REMOVAL OF STAND

CAUTION


- Put the monitor on a stable surface. The monitor may cause injury or damage if it falls or is dropped.
- Do not give a strong impact to the monitor. It may cause damage.
- Unplug the monitor before removal or installation to avoid an electric shock or a damage.

<Installation>


① Attach the Stand-Neck to the VESA Plate and then tighten the 'thumb screw' with the provided screwdriver to secure them.

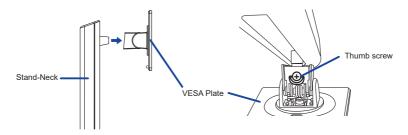

② Install the Stand-Base to the Stand-Neck and then tighten the 'thumb screw' with the provided screwdriver to secure them.




- ③ Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- 4 Hold the monitor and install the assembled stand to the monitor until it clicks to secure.

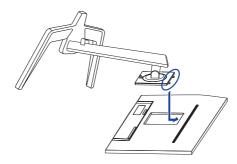


<Removal>

- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- 2 Press the release button to remove the stand.

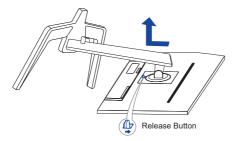

- ③ Loosen the 'thumb screw' with the provided screwdriver to remove the Stand-Neck from the VESA Plate.
- Loosen the 'thumb screw' with the provided screwdriver to remove the Stand-Base from the Stand-Neck.

CONTROLS AND CONNECTORS

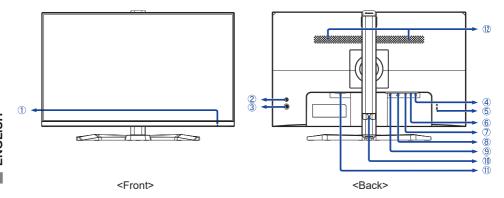

- (1) Power Indicator
 - NOTE Blue: Normal operation
 Orange: Standby mode
- 2 Power Switch ((1))
- 3 Navigation Button [MENU]
 - -Scroll Up / i-Style Color [▲]
 - -Scroll Down / Input Select [▼]
 - -Left / ECO [◀]
 - -Right / Volume [▶]
- 4 Headphone Connector (1)
- S Keyhole for Security Lock
 - NOTE You can fasten a security lock and cable to prevent the monitor from being removed without your permission.
- ⑥ USB Upstream Connector (०
- ⑦ USB Downstream Connector (SV, 500mA)
- ProLite XUB2796QSU: DisplayPort Connector (DP) ProLite XUB2796HSU: HDMI Connector (HDMI)
- ProLite XUB2796QSU: HDMI Connector (HDMI)
 ProLite XUB2796HSU: DisplayPort Connector (DP)
- (10) Cable Holder
- ① AC Connector (~: Alternating current) (~)
- (12) Speakers


CONNECTING YOUR MONITOR: ProLite XUB2796QSU

- ① Ensure that both the computer and the monitor are switched off.
- ② Connect the computer to the monitor with the signal cable.
- ③ Connect the computer to the monitor with the USB Cable.
- 4 Connect the Power Cable to the monitor first and then to the power source.
- 5 Turn on your monitor and computer.

NOTE


- Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).
- The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
- Make sure you tighten the finger screws at each end of the signal cable.
- The Class I pluggable equipment Type A must be connected to protective earth.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.

[Example of Connection]

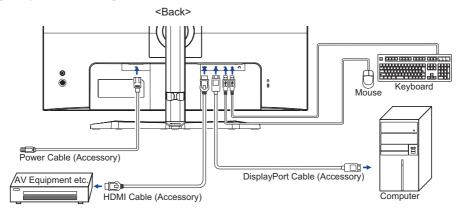

[Collect Cables]

Put the cables through the cable holder to bundle them.




CONNECTING YOUR MONITOR: ProLite XUB2796HSU

- ① Ensure that both the computer and the monitor are switched off.
- ② Connect the computer to the monitor with the signal cable.
- ③ Connect the computer to the monitor with the USB Cable.
- ④ Connect the Power Cable to the monitor first and then to the power source.
- 5 Turn on your monitor and computer.

NOTE


- Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).
- The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
- Make sure you tighten the finger screws at each end of the signal cable.
- The Class I pluggable equipment Type A must be connected to protective earth.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.

[Example of Connection]

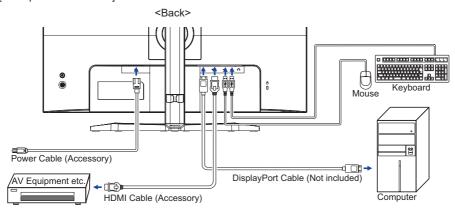

[Collect Cables]

Put the cables through the cable holder to bundle them.



COMPUTER SETTING

■ Signal Timing
Change to the desired signal timing listed on page 30: COMPLIANT TIMING.


ADJUSTING THE HEIGHT AND THE VIEWING ANGLE

- For optimal viewing it is recommended to position yourself directly opposite to the full face of the monitor, then adjust the monitor's height and angle to your own preference.
- Hold the panel so that the monitor does not topple when you change the monitor's height or angle.
- You are able to adjust the monitor's height up to 150mm, 23° upward and 5° downward.

NOTE

- Do not touch the LCD screen when you change the height or the angle. It may cause damage or break the LCD screen.
- Careful attention is required not to pinch your fingers or hands into the moving part of the stand when you change the height or the angle.
- Injury can occur if care is not taken to avoid finger contact with the displays base when adjusting the height.



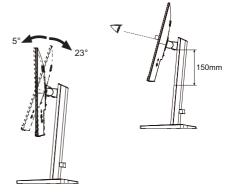

OPERATING THE MONITOR

To create the best picture, your iiyama LCD monitor has been preset at the factory with the COMPLIANT TIMING shown on page 30. You are also able to adjust the picture by following the button operation shown below.


① Press the MENU Button to start the On Screen Display feature. There are additional Menu items which can be switched by using the ◀ / ▶ Buttons.



- ② Select the Menu item which contains the adjustment icon relating to the adjustment you want to make. Press the MENU Button. Then, use the ◀ / ▶ Buttons to highlight the desired adjustment icon.
- ③ Press the MENU Button again. Use the ◀ / ▶ Buttons to make the appropriate adjustment or setting.
- ④ Press the ■ Button to leave the menu, and the settings you just made would be automatically saved.

For example, to correct for OSD vertical position, select Menu item of Setup Menu and then press the MENU Button. Then, select OSD Vertical Position by using the ◀ / ▶ Buttons. An adjustment page appears after you press the MENU Button.

Then, use the ◀ / ▶ Buttons to change the OSD vertical position settings. The OSD vertical position of the overall display should be changing accordingly while you are doing this.

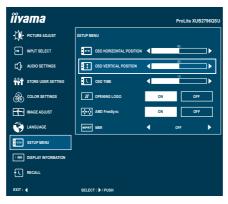

Press the ◀ Button lastly, it ends, all changes are saved in the memory.

NOTE

- When button operations are aborted during adjustment, On-Screen Display disappears when the time set for the OSD Time has passed. Also, press the ■ button to quickly turn off the On-Screen Display.
- Any changes are automatically saved in the memory when the On Screen Display disappears. Turning off the power should be avoided while using the Menu.
- All adjustments have only one setting which applies to all signal timings.

ADJUSTMENT MENU CONTENTS





Adjustment Item	Problen	n / Option	Button to Press
Contrast *2.4	Too dark Too bright		* * *
Brightness *1,2,4	Too dull Too intense	Э	al CD panel
Overdrive *4	It will improv	/ 0 / +1 / +2 /e the gray level response time of th vel results in a faster response	e Lob parier.
Adv. Contrast *4	Off	Typical Contrast Ratio	
Adv. Contrast	On	Increased Contrast Ratio	
	Off	Normal	
ECO *3,4 Direct	Mode1	Brightness of back-light is red	uced.
Direct	Mode2	Brightness of back-light is redu	ced more than Mode1.
	Mode3	Brightness of back-light is redu	ced more than Mode2.
	Off	Typical	
Blue Light Reducer *4	Mode1	Blue light is reduced.	
Direct	Mode2	Blue light is reduced more tha	n Mode1.
	Mode3	Blue light is reduced more tha	n Mode2.
Black Tuner	From -5 to +5 You can adjust Dark shades.		*
Color Saturation	Too weak Too strong		* 4
Gamma * ⁴	You can se	et the Gamma. 2.6	

- *1 Adjust the Brightness when you are using the monitor in a dark room and feel the screen is too bright.
- *2 Contrast and Brightness are disabled when Adv. Contrast is on.
- *3 ECO is off when Adv. Contrast is on.
- *4 Contrast, Brightness, Overdrive, Adv. Contrast, ECO, Blue Light Reducer and Gamma are disabled when i-Style Color is activated.

Direct

You can skip the Menu items and directly display an option setting screen by using the following button operations.

- ECO : Press the ◀ Button when the Menu is not displayed.
- Blue Light Reducer: Press and hold the ▲ Button for 1-2 seconds when the Menu is not displayed.






Adjustment Item	Problem / Option		Button to Press	
	Auto		Search for an available input source and select automatically.	
Input Source	Manual	HDMI	Select the Digital (HDMI) input.	
		DisplayPort	Select the Digital (DisplayPort) input.	

NOTE Input source is fixed, not selected automatically when HDMI and DisplayPort which are selected.

Direct

You can skip the Menu items and directly display an option setting screen by using the following button operations.


• Input Select : Press the ▼ Button when the Menu is not displayed.

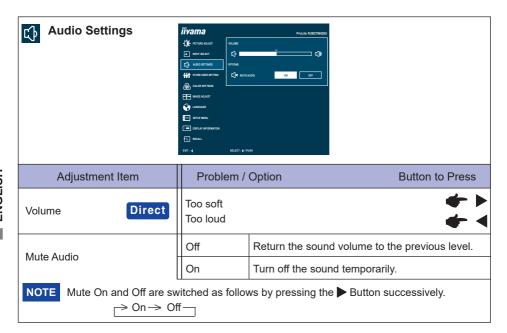


Direct


You can skip the Menu items and directly display an adjustment scale by using the following button operations.

• Volume : Press the > Button when the Menu is not displayed.

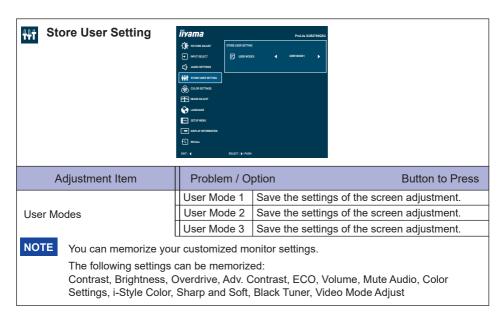

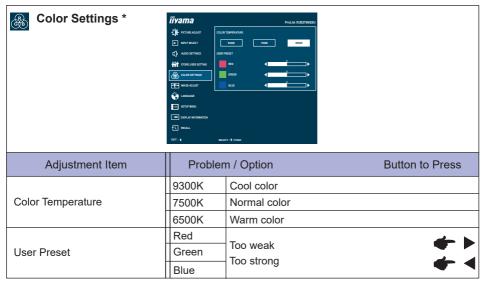

^{*} Color Settings adjustments are disabled when i-Style Color or Blue Light Reducer is activated.

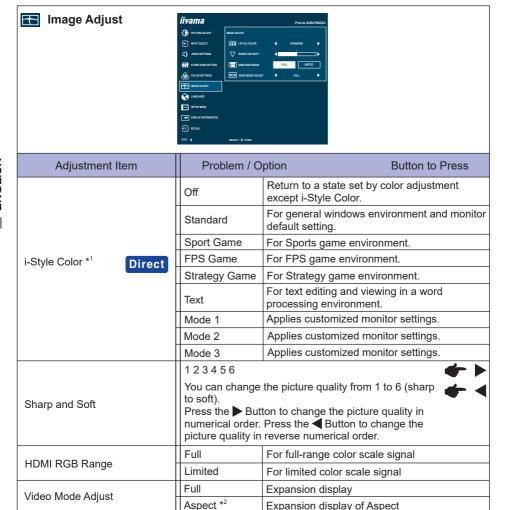


^{*1} i-Style Color is disabled when Blue Light Reducer is activated.


Direct

You can skip the Menu items and directly display an option setting screen by using the following button operations.

• i-Style Color : Press the A Button when the Menu is not displayed.

^{*2} Option unavailable with 16:9 resolution.

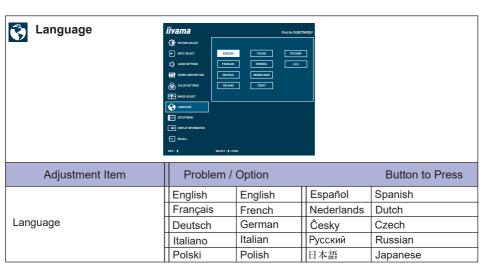


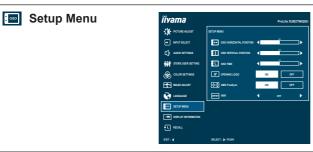

Adjustment Item	Problem / Option		Button to Press
OSD Horizontal Position	OSD is t		*
OSD Vertical Position	OSD is too low OSD is too high You can set the OSD display duration time between 5 and 30 seconds.		+ +
OSD Time			
Opening Logo	Off	iiyama Logo does not displeturned on.	ay when the monitor is
	On	iiyama Logo displayed when the monitor is turned or	
AMD FreeSync *1	Off	The FreeSync function is turned off.	
AMD FreeSylic	On	Enable the FreeSync functi	on.
MBR *2 Off / +1 / +2 It will improve the moving picture res the LCD panel. A higher level results in a faster resp			

^{*1} AMD FreeSync is disabled when MBR is activated.

^{*2} MBR is disabled when AMD FreeSync is on. Available for 75Hz only.





Displays information regarding the current input signal coming from the graphic card in your computer.

NOTE

See your graphic card user guide for more information about changing the resolution and refresh.



Lock Mode

<OSD Menu>

- 1. The OSD lock will be activated by pressing the MENU button for about 10 seconds. If you try to access the OSD by pressing any of the buttons, message "OSD Locked" will appear on the screen.
- 2. The OSD lock will be deactivated by pressing the MENU button again for about 10 seconds.

<Power Switch>

- 1. The power switch lock will be activated by pressing the ◀ button for about 10 seconds. Locking the power switch means that won't be able to turn off the Monitor while the power switch is locked. If presses the power switch message "Power Button Locked" will appear on the screen.
- 2. The power switch lock will be deactivated by pressing the ◀ button again for about 10 seconds.


STANDBY FEATURE

This product features the standby function. When activated, it automatically reduces unnecessary power consumption of the monitor when your computer is not in use.

There is a standby step the monitor takes as described below. The standby function, including any timer settings is configured by the operating system. Check your operating system manual for information on how this can be configured.

■ Standby Mode

When the video signal from the computer is off, the monitor enters into Standby Mode which reduces the power consumption to less than 0.5W*. The screen becomes dark, and the power indicator turns to orange. From Standby Mode, the image reappears in several seconds when either the keyboard or the mouse are touched again.

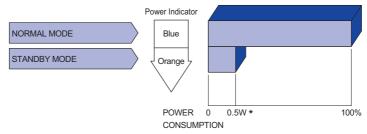

* When the USB devices are not connected.

TROUBLE SHOOTING

Problem

If the monitor fails to operate correctly, please follow the steps below for a possible solution.

- 1. Perform the adjustments described in OPERATING THE MONITOR, depending on the problem you have. If the monitor does not get a picture, skip to 2.
- Consult the following items if you cannot find an appropriate adjustment item in OPERATING THE MONITOR or if the problem persists.
- 3. If you are experiencing a problem which is not described below or you cannot correct the problem, discontinue using the monitor and contact your dealer or iiyama service center for further assistance.

Chack

	Troblem	Shook
1	The picture does not appear.	
	(Power indicator does not light up.)	 □ The Power Cable is firmly seated in the socket. □ The Power Switch is turned ON. □ The AC socket is live. Please check with another piece of equipment.
	(Power indicator is blue.)	 ☐ If the blank screen saver is in active mode, touch the keyboard or the mouse. ☐ Increase the Contrast and/or Brightness. ☐ The computer is ON. ☐ The Signal Cable is properly connected. ☐ The signal timing of the computer is within the specification of the monitor.
	(Power indicator is orange.)	 ☐ If the monitor is in standby mode, touch the keyboard or the mouse. ☐ The computer is ON. ☐ The Signal Cable is properly connected. ☐ The signal timing of the computer is within the specification of the monitor.
2	The screen is not synchronized.	☐ The Signal Cable is properly connected.☐ The signal timing of the computer is within the specification of the monitor.
3	The screen position is not in the center.	$\hfill\square$ The signal timing of the computer is within the specification of the monitor.
4	The screen is too bright or too dark.	$\hfill\square$ The video output level of the computer is within the specification of the monitor.

⑤ The screen is shaking.	☐The power voltage is within the specification of the monitor. ☐The signal timing of the computer is within the specification of the monitor.
⑥ No sound.	□The audio equipment (computer etc.) is ON. □The Volume is turned up. □The Mute is OFF. □The audio output level of the audio equipment is within the specification of the monitor.

Check

⑦ The sound is too ☐The audio output level of the audio equipment is within the specification of

RECYCLING INFORMATION

Problem

loud or too quiet.

For better environment protection please don't dispose your monitor.

Please visit our web site: https://iiyama.com for monitor recycling.

the monitor.

APPENDIX

Design and specifications are subject to change without prior notice.

SPECIFICATIONS: ProLite XUB2796QSU-B5

Size Category		27"			
	Panel technology	IPS (In-Plane-Switching)			
	Size	Diagonal: 27" (68.5cm)			
LCD Panel	Pixel pitch	0.233mm H × 0.233mm V			
	Brightness	250cd/m² (Typical), 185cd/m² (Default / Energy Saving)			
Fallel	Contrast ratio	1000 : 1 (Typical), Adv. Contrast Function Available			
	Viewable angle	Right / Left : 89° each, Up / Down : 89° each (Typical)			
	MPRT	1ms			
Display C	Colors	Approx. 16.7M			
Sync Fre	quency	Horizontal: 31.0-120.0kHz, Vertical: 48-75Hz			
Native R	esolution	2560 × 1440, 3.7 MegaPixels			
Support i	max. resolution	2560 × 1440 75Hz			
Input Cor	nnector	HDMI, DisplayPort			
Input Vid	eo Signal	HDMI, DisplayPort			
USB Star	ndard	USB2.0 (DC5V, 500mA)			
	of USB Ports	1 Upstream : Series B			
Connector shape		2 Downstream : Series A			
•	ne Connector	ø 3.5mm mini jack (Stereo)			
Speakers		2W × 2 (Stereo speakers)			
	n Screen Size	596.7mm W × 335.7mm H / 23.5" W × 13.2" H			
Power So	ource	100-240VAC, 50/60Hz, 1.5A			
Power Consumption*		23W typical, Standby mode: 0.5W maximum, Off mode: 0.3W maximum			
Dimensions / Net Weight		611.5× 404.5 - 554.5 × 252.0mm / 24.1 × 15.9 - 21.8 × 9.9" (W×H×D) 5.2kg / 11.5lbs			
Angle		Tilt: Upward: 23° Downward: 5° Rotation: Clockwise: 90°			
Environm Consider		Operating: Temperature 5 to 35°C / 41 to 95°F Humidity 10 to 90% (No condensation) Storage: Temperature -20 to 60°C / -4 to 140°F Humidity 10 to 90% (No condensation)			
Approvals		CE, UKCA, TÜV-Bauart, EAC, VCCI, PSE			


NOTE * When the USB devices are not connected.


SPECIFICATIONS: ProLite XUB2796HSU-B5


Size Category		27"			
	Panel technology	IPS (In-Plane-Switching)			
	Size	agonal: 27" (68.6cm)			
LCD Panel	Pixel pitch	0.311mm H × 0.311mm V			
	Brightness	250cd/m² (Typical), 175cd/m² (Default / Energy Saving)			
	Contrast ratio	1000 : 1 (Typical), Adv. Contrast Function Available			
	Viewable angle	Right / Left : 89° each, Up / Down : 89° each (Typical)			
	MPRT	1ms			
Display 0	Colors	Approx. 16.7M			
Sync Fre	quency	Horizontal: 31.0-85.0kHz, Vertical: 48-75Hz			
Native R	esolution	1920 × 1080, 2.1 MegaPixels			
Support i	max. resolution	1920 × 1080 75Hz			
Input Co	nnector	HDMI, DisplayPort			
Input Vid	eo Signal	HDMI, DisplayPort			
USB Sta	ndard	USB2.0 (DC5V, 500mA)			
Number of USB Ports Connector shape		1 Upstream : Series B 2 Downstream : Series A			
Headphone Connector		ø 3.5mm mini jack (Stereo)			
Speakers		2W × 2 (Stereo speakers)			
Maximun	n Screen Size	597.9mm W × 336.3mm H / 23.5" W × 13.2" H			
Power So	ource	100-240VAC, 50/60Hz, 1.5A			
Power Consumption*		19W typical, Standby mode: 0.5W maximum, Off mode: 0.3W maximum			
Dimensions / Net Weight		610.0×403.5 - 553.5 × 252.0mm / 24.0 × 15.9 - 21.8 × 9.9" (W×H×D) 5.2kg / 11.5lbs			
Angle		Tilt: Upward: 23° Downward: 5° Rotation: Clockwise: 90°			
Environm Consider		Operating: Temperature 5 to 35°C / 41 to 95°F Humidity 10 to 90% (No condensation) Storage: Temperature -20 to 60°C / -4 to 140°F Humidity 10 to 90% (No condensation)			
Approvals		CE, UKCA, TÜV-Bauart, EAC, VCCI, PSE			


NOTE * When the USB devices are not connected.

DIMENSIONS: ProLite XUB2796QSU

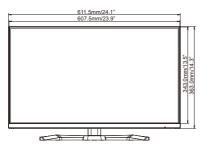






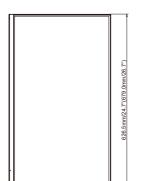

(): Maximum adjustment range

DIMENSIONS: ProLite XUB2796HSU

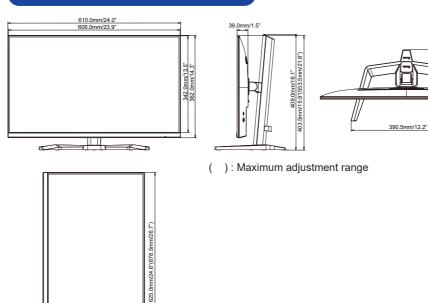

COMPLIANT TIMING

				_
Video Mode	Horizontal	Vertical	Dot Clock	
	Frequency	Frequency	DOI CIOCK	
640 × 480	31.469kHz	59.940Hz	25.175MHz	
800 × 600	37.879kHz	60.317Hz	40.000MHz	1
000 × 000	46.875kHz	75.000Hz	49.500MHz	1
1004 × 760	48.363kHz	60.004Hz	65.000MHz	1
1024 × 768	60.023kHz	75.029Hz	78.750MHz	1
1280 × 1024	79.980kHz	75.020Hz	135.000MHz	1
1600 × 1200	75.000kHz	60.000Hz	162.000MHz	1
1680 × 1050	65.290kHz	60.000Hz	146.250MHz	1
1920 × 1080	66.590kHz	59.930Hz	138.500MHz	1
	83.890kHz	74.970Hz	174.500MHz	1
2500 4440	88.787kHz	59.951Hz	241.500MHz	1
2560 × 1440	111.788kHz	74.925Hz	298.470MHz	1

NOTE * Available for ProLite XUB2796QSU only.